

Connect a Jotron TR7750 to Mimer X-Link

Interface Power Supply

+12VDC / max 0,3A.

See wiring diagram on the following page.

Radio setup

The interface is pre-set for the following radio default settings:

- Rx Config/Audio/Line Output Level/0.0dBm
- Rx Config/Squelch/RxBusyOutput: Closed when busy (default)
- Tx Config/Audio/Input Source/Auto
- Tx Config/Audio/Line Sensitivity/-10dBm
- Tx Config/Keying/Source/Txgnd


See screen shots on following pages.

The radio is connected through one RJ45 to the Tx: REM port.

Settings in the X-Link interface

Select the proper settings for Radio A or Radio B depending on your connection.

- Radio with squelch output for Rx detect

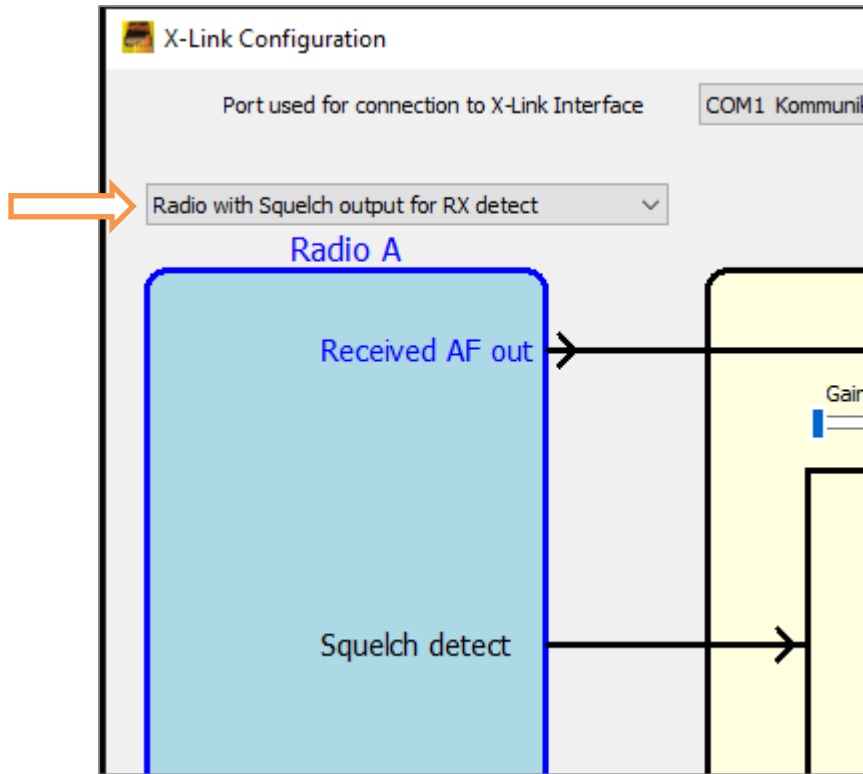

Part of the Configuration software window

Check/adjust the audio levels in both directions in the interface so that the users hears the X-Link with the same level as when listening to other radios.

See the X-Link setup manual for details on setting the audio level.

Radio Settings Screen shots



Select Mic, TxKey and Txgnd.
Unselect Line.



Connection Cable:

Select the proper configuration below depending on if your radio will be connected as Radio A or Radio B to the X-Link interface.

