

## X-Link Cable kit 3360

**Connect a Motorola CM/GM-series with  
16 PIN back connector to Mimer X-Link MK2**

Also refer to the X-Link setup manual.

### **Interface Power Supply**

12VDC / max 0,3A.

Power connection through separate cable delivered with the interface. Red is positive.

### **Radio programming**

- Pin#3 shall be set to Ext. Mic PTT, active low.
- Pin#14 shall be set to PL/Talkgroup Detect, active low

## Settings in the X-Link interface


Select the proper settings for Radio A or Radio B in the X-Link setup software, depending on how you connect to the interface.

The CM/GM series radios have an output signal that triggers when the channel is active. Depending on radio model and radio system you can set it, in the radio, to trigger on Squelch or PL-detect.

This is preferred to using the VOX detect function in the X-Link.

Therefore set the X-Link to use:

- Radio with squelch output for Rx detect

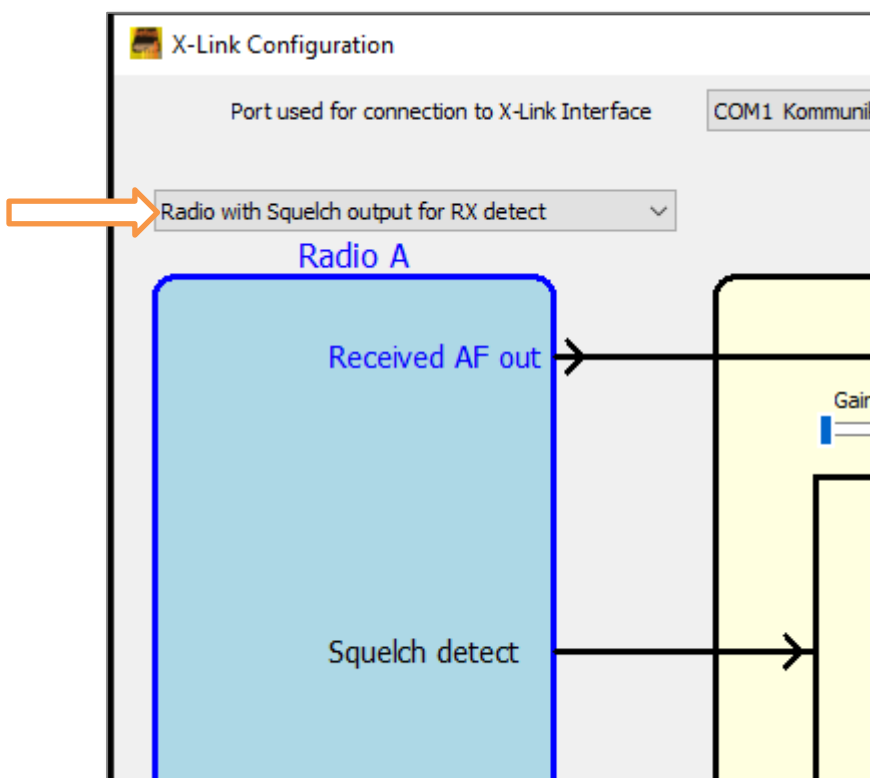

*Part of the Configuration software window*

Check/adjust the audio levels in both directions in the interface so that the users can hear the X-Link with the same level as when listening to other radios.

See the X-Link setup manual for details on setting the audio level.