

X-Link Cable kit 3365

Connect an Icom IC-F5122 etc. w/o 25PIN connector to Mimer X-Link MK2

Also refer to the X-Link setup manual.

Interface Power Supply

12VDC / max 0,3A.

Power connection through separate cable delivered with the interface. Red is positive.

Programming the radio

No special programming is needed in the radio.

Volume setting

The radios volume control knob shall be set for 50% volume. This is when the knob points straight up (12 o'clock).

Connection


The radio is connected both through the front microphone connector and through the external speaker connector at the back side.

Settings in the X-Link interface

Select the proper settings for Radio A or Radio B depending on your connection.

- Radio with AF level sense for Rx detect.
- Set the detect level etc.
Details can be found in the setup manual.

The levels in the picture are our recommendations. You might find that your radio needs adjustments.

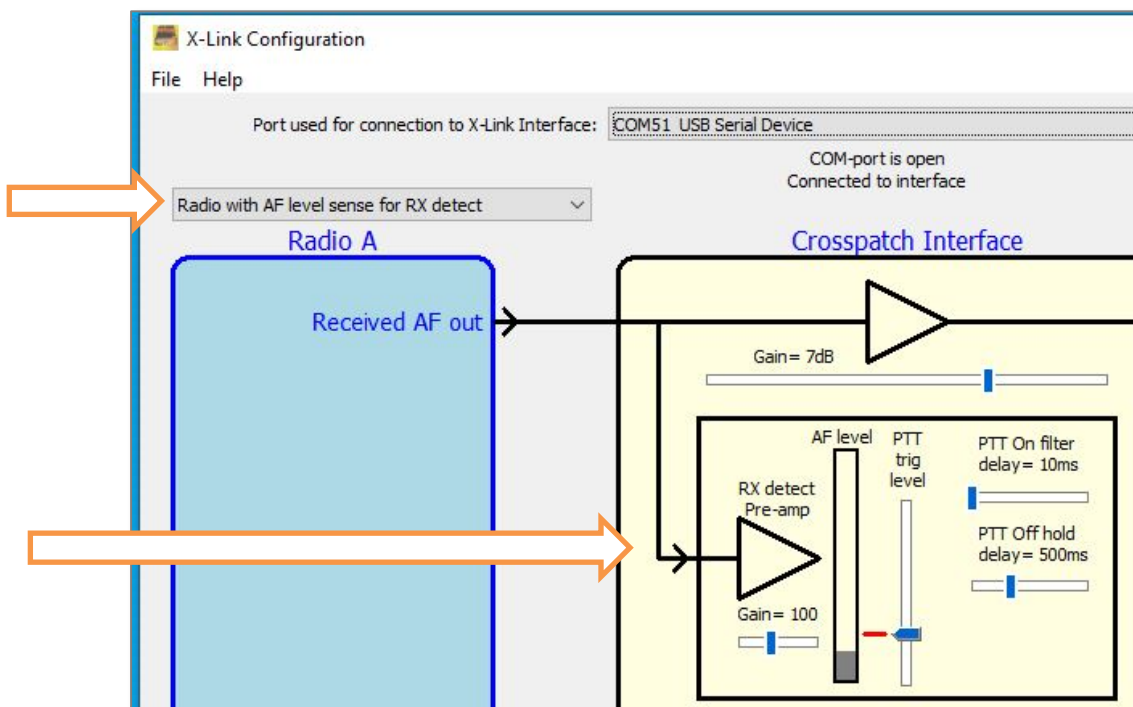

Part of the Configuration software window

Check/adjust the audio levels in both directions in the interface so that the users can hear the X-Link with the same level as when listening to other radios.

See the X-Link setup manual for details on setting the audio level.